


SHAD

BENELLI LEONCINO 800 / 800 TRAIL '21-

BCN

B0LN81SR

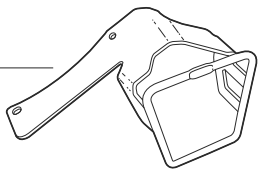

1 263122 x 1 ←



2 260686 x 2
Ø16 Ø9 x 8



3 303045 x 2
Ø8



4 303027 x 2
Ø8



5 304028 x 2
M8x25 DIN 7380



6 304053 x 2
M8x30 DIN 7380

WARNING! ⚠



GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

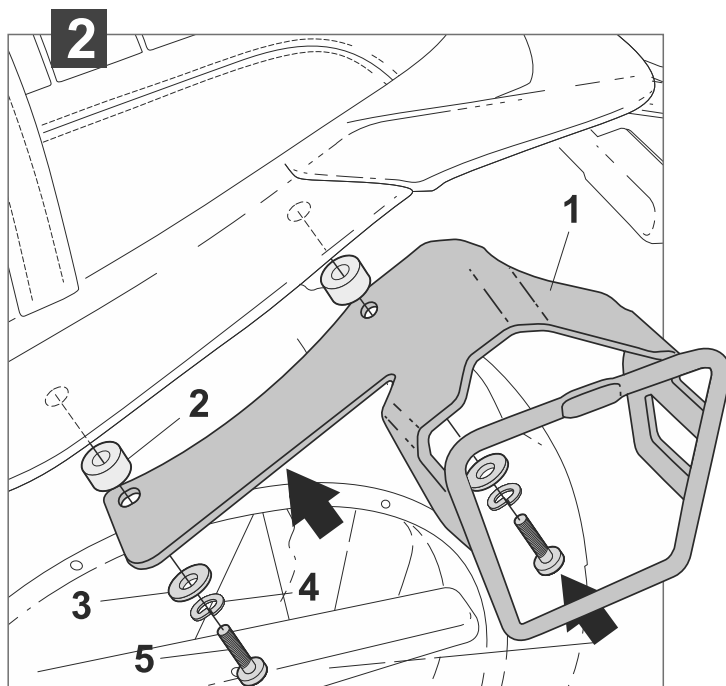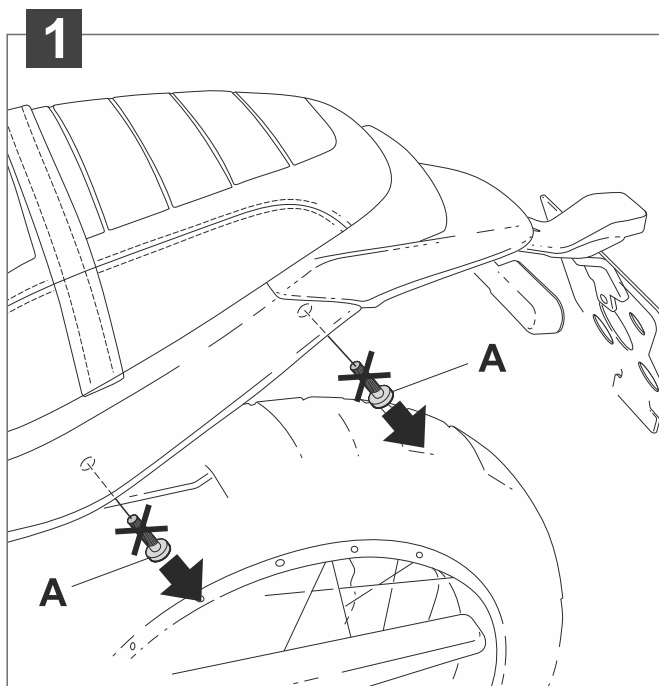

3 SR SYSTEM + TOP MASTER

