




EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Triumph Tiger 1200
Spindle Bobbin




- Ⓐ 1 x Shaft
- Ⓑ 1 x Left Hand Spacer
- Ⓒ 1 x Right Hand Spacer
- Ⓓ 2 x M6 Washer
- Ⓔ 2 x M6 Nut
- Ⓕ 2 x Spindle Bobbins

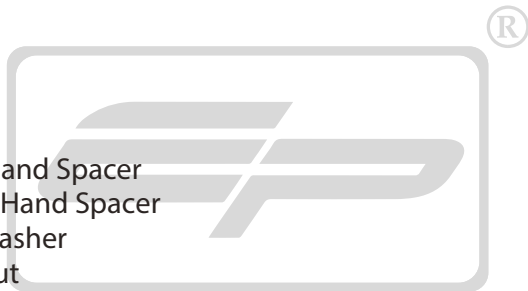



EVOTECH[®]
P E R F O R M A N C E

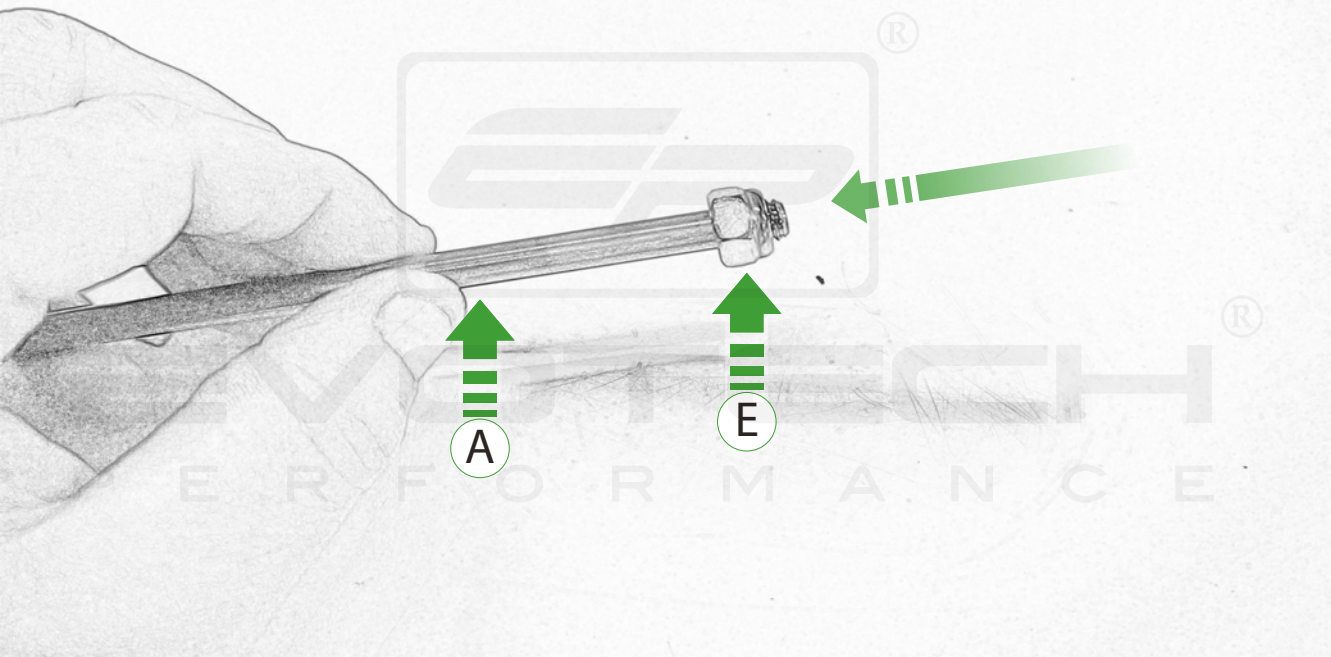





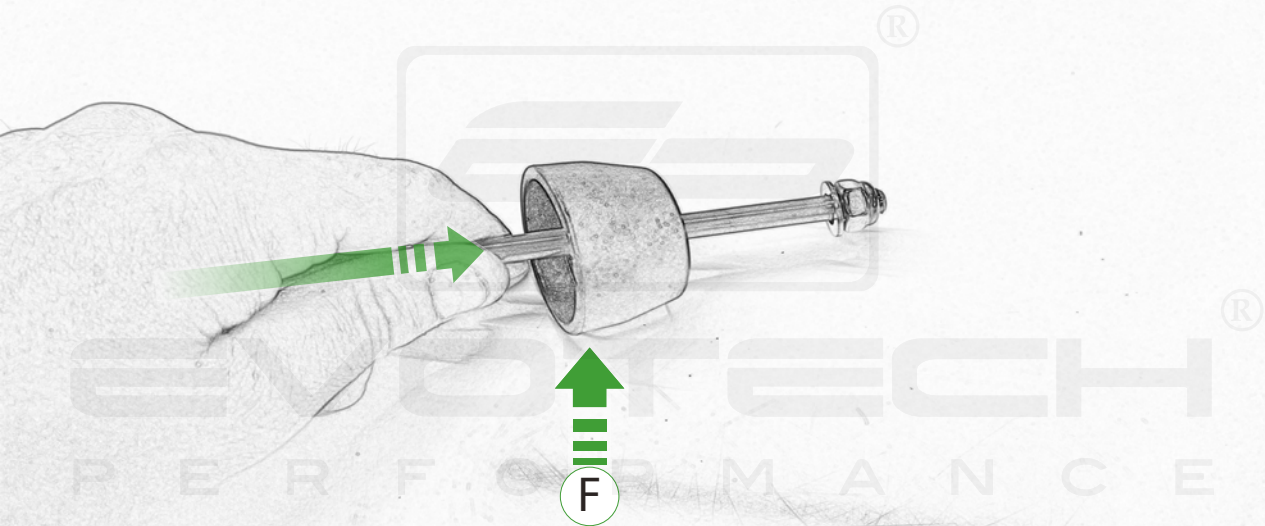

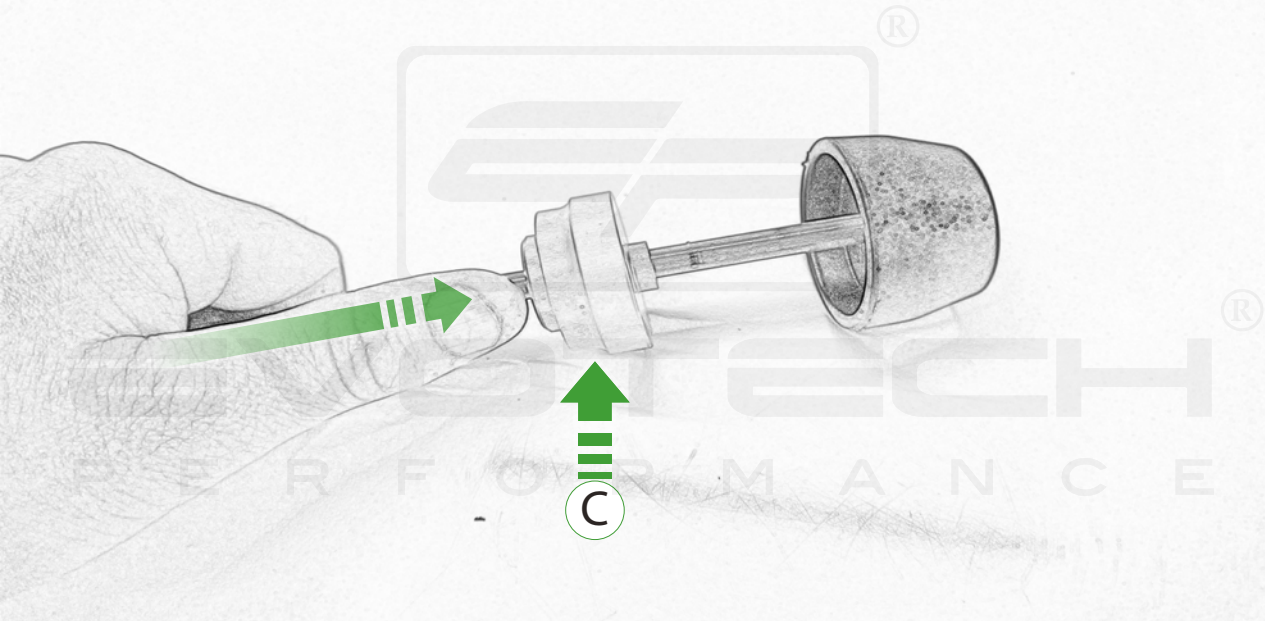

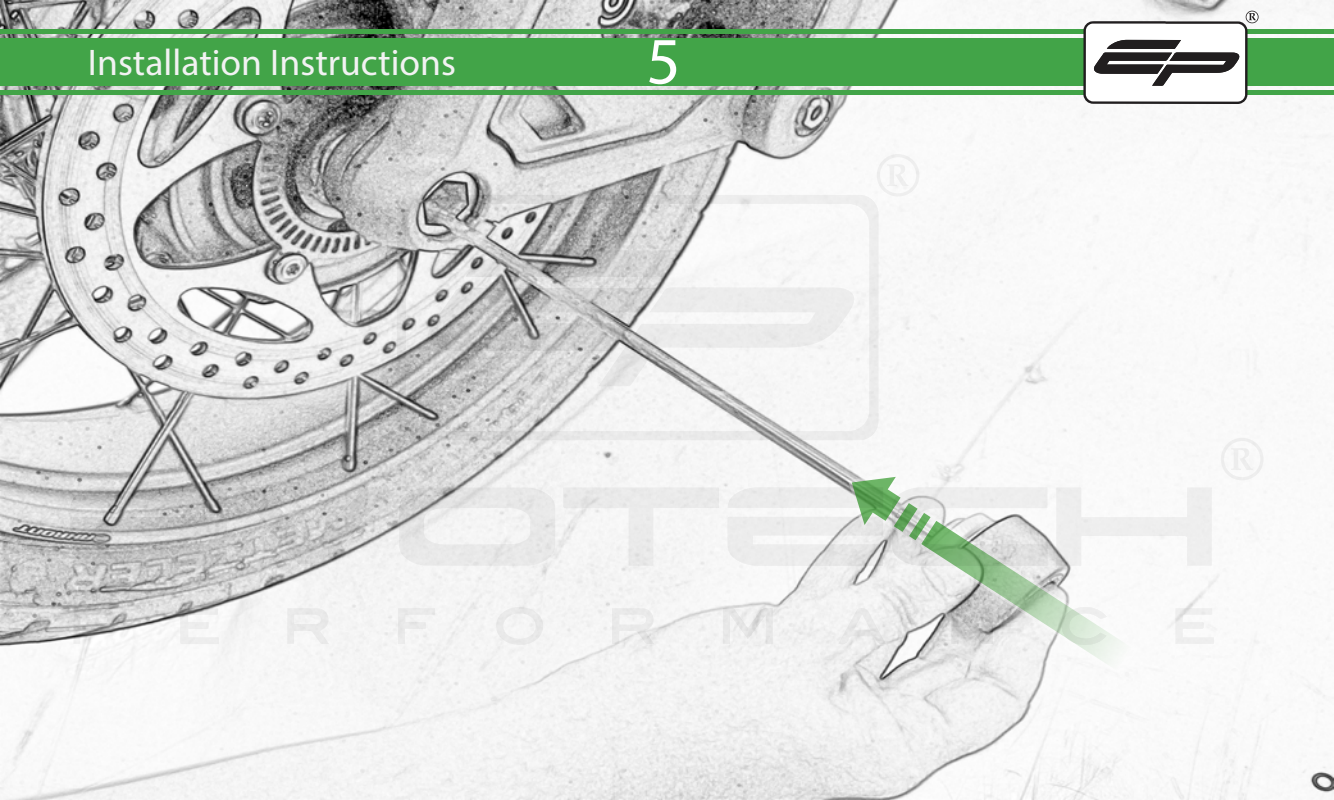

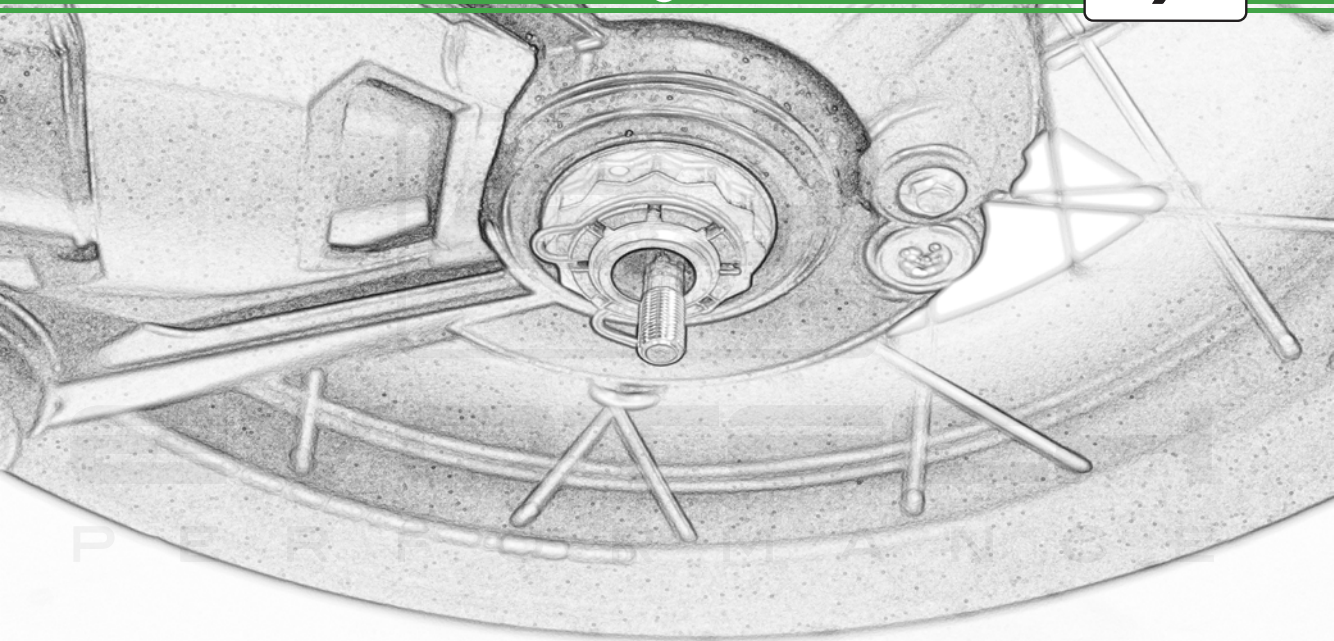

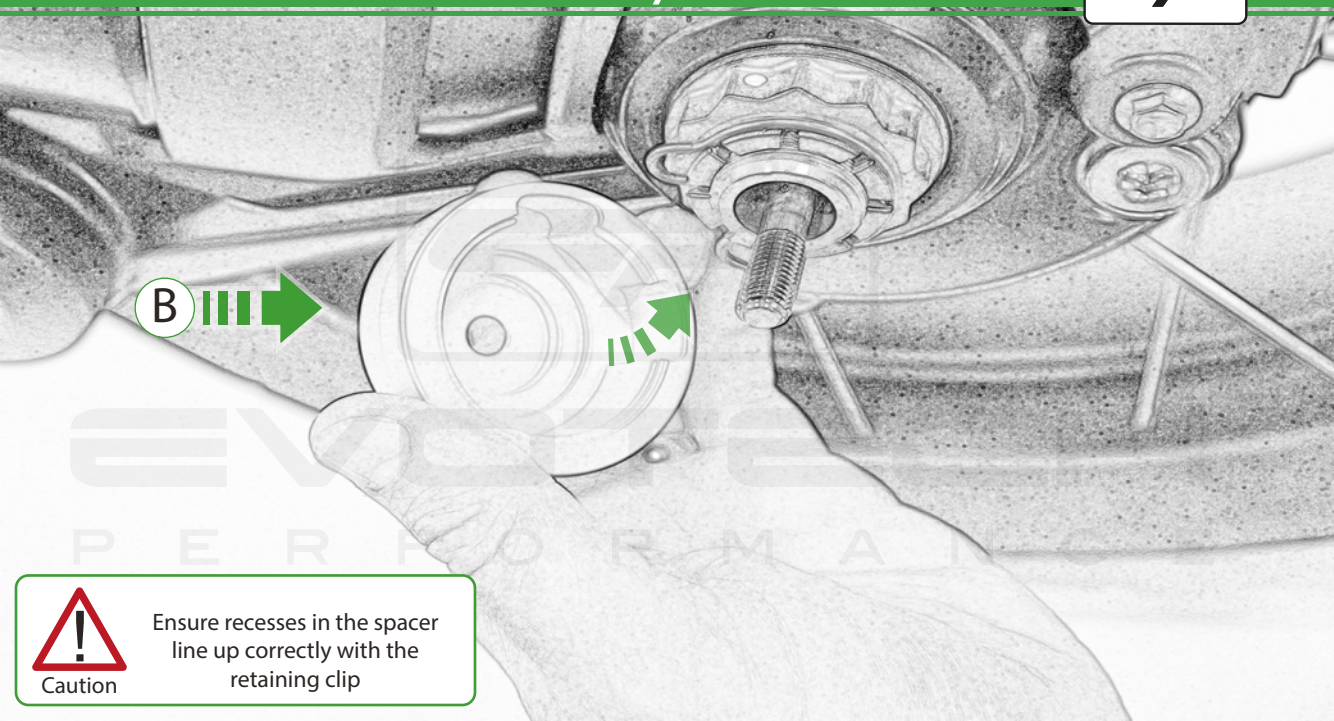



B





Caution

Ensure recesses in the spacer
line up correctly with the
retaining clip

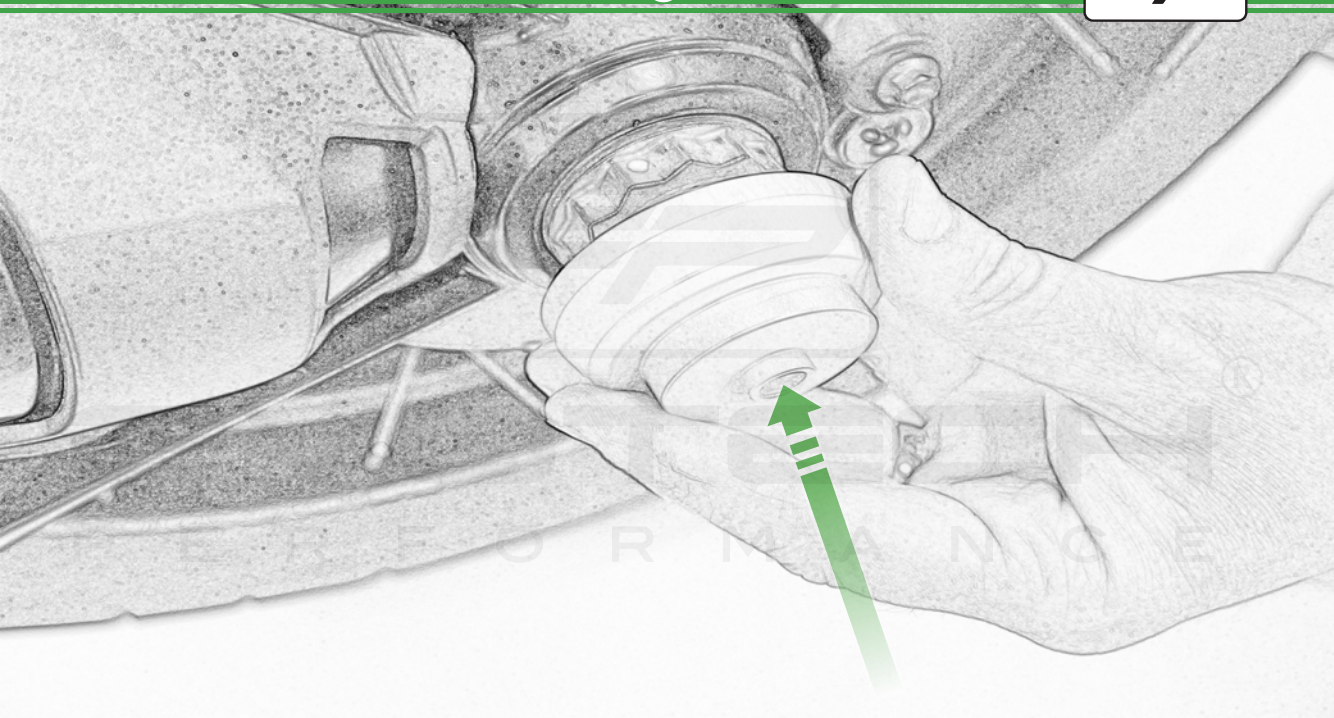


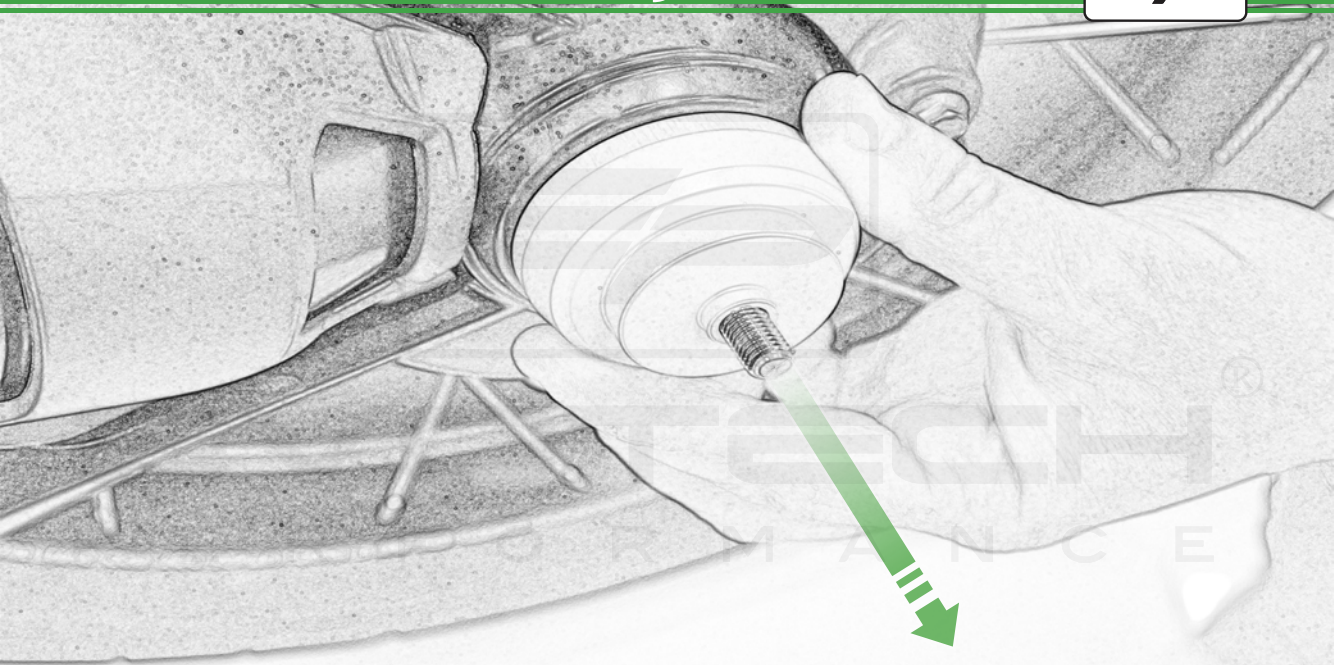

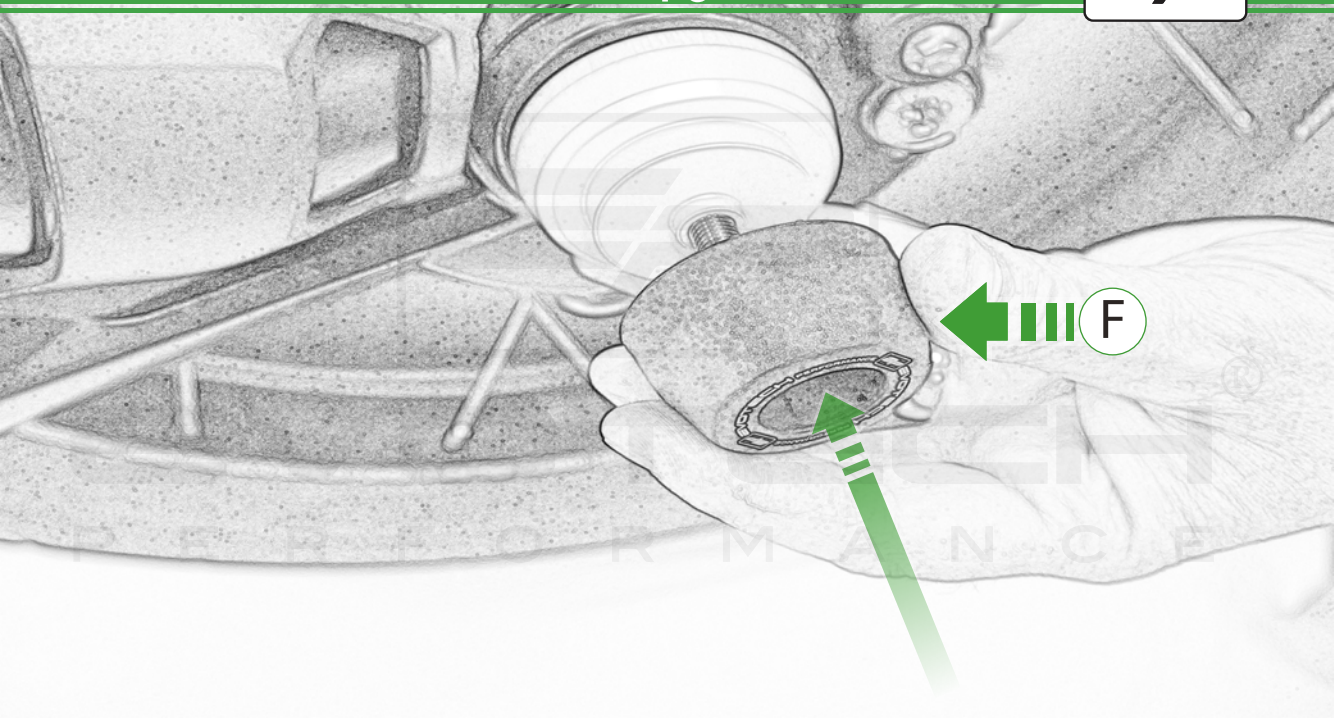

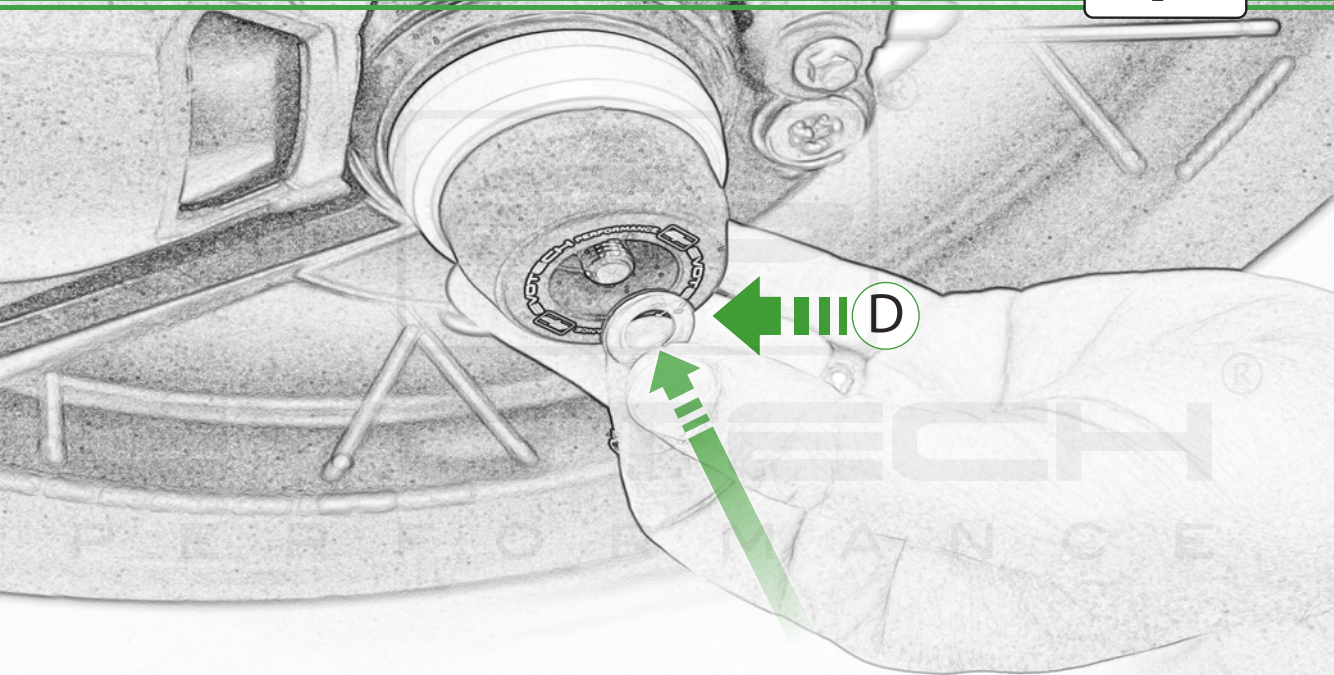

← D

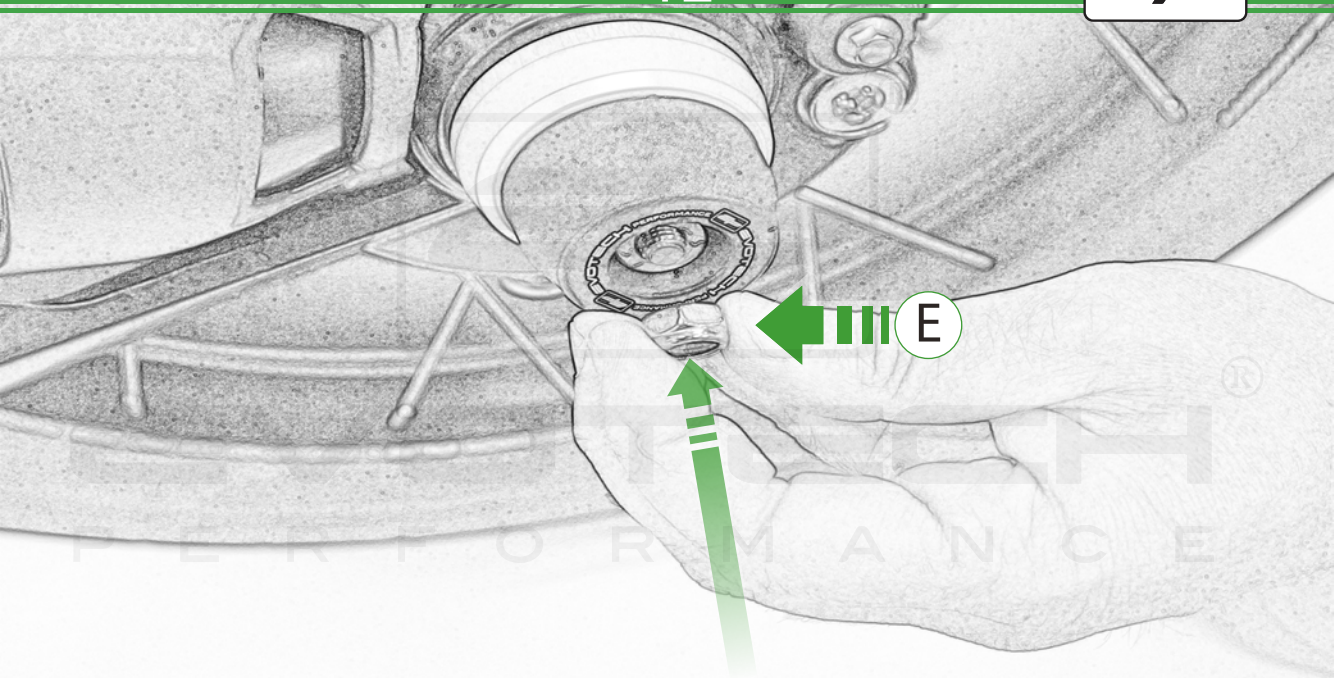

PERFORMANCE



Torque Setting
8Nm



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com